

Screens

On this page you can see renders of all display modes,
the upper line remains the same:

Mode	CS layer
BPM	current BPM
Pat	current bank/pattern
Trk	edit track number
Bt	current beat

Normal mode

Mode	BPM	Pat	Trk	Bt
Nrm	135	A3	6	3
Nvl	Avl	Note		
105	127	A#3		

Nvl	normal velocity
Avl	accent velocity
Note	note nr of edit track

Pattern mode

Mode	BPM	Pat	Trk	Bt
Pat	135	A3	6	3

Track mode

Mode	BPM	Pat	Trk	Bt
Trk	135	A3	6	3
Len	Div	Note		
32	16	A#1		

Len	length of edit track
Div	note division of edit track
Note	note nr of edit track

Special function button mode

Mode	BPM	Pat	Trk	Bt
Sfb	135	A3	6	3
Func	Val			
CutTr	4			

Func	selected function
val	value for current function

Song mode

Mode	BPM	Pat	Trk	Bt
Sng	135	A3	6	3
Pos	Pat	Repeat		
4	A3	3		

Pos	song position
Pat	selected pattern
Repeat	number of times the pattern is repeated

Note mode

Mode	BPM	Pat	Trk	Bt
Note	135	A3	6	3
Pos	Note	Gate		
3	B	2	x	

Pos	track position
Note	note number
Gate	indicates if gate is active

CC mode

Mode	BPM	Pat	Trk	Bt
CC	135	A3	6	3
Nr	Val	Mch		
100	127	1		

Nr	selected CC
Val	value of selected CC
MCH	global CC midichannel

[back](#)

From:
<http://www.midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:
http://www.midibox.org/dokuwiki/doku.php?id=dseq_cs

Last update: **2007/04/03 12:35**

