2025/11/04 06:32 1/3 Firmware Troubleshooting

# **Firmware Troubleshooting**

## **Apps**

dout\_buttons

dout\_enc

enc\_speed

iic midi sw loopback

jitter\_mon

lcd\_interconnection\_test

mbfm\_interconnection\_test

mbfm\_testtone

mbsid\_interconnection\_test

A CORE→SID Module Interconnection Test

This application allows you to check the interconnections to the SID module with a multimeter. You can control the SID pins by sending a Modulation Wheel event to your MIDIbox SID - just connect a keyboard or use MIDI-Ox (View→Control Panel), or the MIOS MIDI Keyboard (click on the modulation wheel and use the cursor keys up/down).

By default all unselected pins are 0V, except for the CS# pin which is 5V

The Pins are mapped to following Modulation Wheel Values:

```
# 0: Pin A0 = 5V

# 1: Pin A1 = 5V

# 2: Pin A2 = 5V

# 3: Pin A3 = 5V
```

```
# 4: Pin A4 = 5V

# 5: Pin RES# = 5V

# 6: Pin D0 = 5V

# 7: Pin D1 = 5V

# 8: Pin D2 = 5V

# 9: Pin D3 = 5V

#10: Pin D4 = 5V

#11: Pin D5 = 5V

#12: Pin D6 = 5V

#13: Pin D7 = 5V

#14: Pin CS# = 0V
```

The current pin name selected will show on the LCD (if connected).

The pins are identified by : \_?

To measure the voltage (and test the connection to that pin is good), connect your multimeter's red lead to \_?\_ and the black lead to \_?\_ and select the pin using the modulation wheel.

#### mbsid\_led\_matrix\_test

#### mbsid\_testtone

SID Testtone generator

This MIOS application generates a simple 1kHz triangle testtone on the SID. There is no "MIDI Note On" event required to start the sound, you should hear it immediately after the MIOS bootphase

In addition, a 1 kHz pulse will be generated on the CS lines to the two SIDs. This feature allows you to test the output amplifier of the SID module (unplug SID, connect socket pin #8 with #27)

## mf\_calibration

mf direct control

revision id

### srio\_interconnection\_test

http://wiki.midibox.org/ Printed on 2025/11/04 06:32

2025/11/04 06:32 3/3 Firmware Troubleshooting

# **Hints**

From

http://wiki.midibox.org/ - MIDIbox

Permanent link:

http://wiki.midibox.org/doku.php?id=home:skills:troubleshooting:firmware&rev=1246785184

Last update: 2009/07/05 09:13

