MIDIbox Quad Genesis: Front Panel

To build the front panel of MIDIbox Quad Genesis, you will need (details on each part below):

- An aluminum front panel
- A PCB to hold all the buttons, LEDs, encoders, etc., and of course all these electronic components themselves
- A bunch of 3D printed transparent button caps
- Some 3D printed transparent LED pipes for the FM widget
- A 2×40 standard MIDIbox-compliant character LCD screen
- Knob caps for the encoders, including a datawheel-style cap for the datawheel encoder
- The dual-gang and single-gang potentiometers (one each) for the Genesis module volume controls, and their appropriate knob caps (see MBHP_GENESIS)
- A whole bunch of M3 or 4-40 screws, nuts, washers, and standoffs
- Standard MIDIbox 10-pin and 16-pin IDC cables, for connecting the front panel PCB to the core's J8/9 and for connecting the LCD to the core's J15A

Dimensions

The aluminum (or acrylic) front panel of MIDIbox Quad Genesis is $15^{\circ} \times 11^{\circ}$ (38.1 x 27.9 cm), and the front panel PCB itself is 13.85° x 9.85° (35.18 x 25.02 cm), leaving a 0.57° (1.45 cm) border around the edge.

The spacing between the underside of the front panel and the upper side of the PCB is about 0.27" (7 mm), which is originally defined by the encoders and the 3D printed buttons are made to match this. I used 1/4" nylon spacers/standoffs from eBay plus a flat washer (4-40 or M3) to achieve this spacing. I used 0.75" 4-40 screws to put together the front panel, in which case the depth of the assembly was 0.75" with the electrolytic capacitors and pin header / IDC connector sticking out past this. The panel and PCB can be fastened together with 4-40 or M3 screws.

Aluminum Front Panel

There are two designs available here: my original, and a modified design with the LED pipes in the LED rings having been replaced by 3mm LEDs just sticking through holes in the aluminum.

It took me over 2 hours just to insert the tiny LED pipes in the slits in one single front panel with the first design, which is why I recommend the second. Since they're 3D printed (see below), they have a small range of sizes, and at that scale some are too big and some are too small. I still left them in place for the FM widget and the DAC VU meter; if you don't want those either for some reason, it shouldn't be hard to replace them with holes.

All the LED holes and screw mounting holes are 1/8" (3.17 mm), which should give 3mm LEDs a little play (some are in practice slightly wider than 3mm, and some aren't actually 3mm at all), and are also big enough for both M3 and 4-40" screws. On my own panel, I had to drill out some of the holes a bit for the yellow and green LEDs sticking through the front panel; I recommend you buy the LEDs you're going to put through the holes first and measure them before you have the front panel manufactured.

It may be possible to make the front panel out of acrylic, a-la MIDIbox SEQ V4. Since the front panel PCB is bolted to it in many places, it will probably be sturdy enough. If it's not, there's a row of screw holes slightly below halfway down the panel, and maybe you can have those screws go into an aluminum bar spanning the width of the front panel and attaching to the sides of your case, to provide extra support in the middle.

Downloads

(You will need to be logged in to your MIDIbox Forum account to access these downloads)

mbqg_fp_original.fpd

mbqg_fp_modledrings.fpd

MBQG_FP PCB

A custom front panel PCB is purchaseable directly from Sauraen for \$50 plus at-cost shipping. It includes a free detachable MBHP_GENESIS_LS PCB in the space where the volume knobs will be on the front panel. If you are interested in purchasing one, contact Sauraen by private message at the MIDIbox Forums or post in the MIDIbox Quad Genesis thread there.

Photos

Front:

×

Back:

×

Populated and with almost all LEDs lit:

×

Parts List for MBQG_FP PCB

This is the set of parts I used to build the two MIDIbox Quad Genesis units I constructed. It can also serve as guidelines for if you're building your own board from scratch on veroboard. Here are some notes and caveats:

 As explained above in the section of the aluminum front panel, I used LED pipes for the LED rings, to give them a distinctive oblong shape. To save money on the milling costs and labor on inserting hundreds of tiny plastic pieces into the front panel, most of which are either too small or too big, I recommend making the LED rings just by having 3mm LEDs sticking up through the aluminum. In this case, the LEDs I used below will be too bright to look at directly-they were used to illuminate the LED pipes. So please consider changing to different LEDs.

- Please note that for the LEDs which are under illuminated buttons or under the remaining LED pipes, you will need LEDs which are very bright like the ones below! Cheap 1mcd LEDs will be completely invisible! You need at least 1000mcd; the brightnesses I used are listed below. If you are going to the trouble of making this thing, don't skimp on the LEDs!
- Also don't skimp on the encoders! For MIDIbox FM V2.0/V2.1 I used cheap encoders from China to save money, and many of them barely work anymore!
- Of course, the color of all the LEDs is completely up to personal preference, though you should always use the same two colors beneath all bi-color buttons. Please plan out carefully how many of each type of LED you will need based on your color preferences and which LEDs will be sticking through the front panel versus lighting up buttons or light pipes. Trust me, you don't want to use regular LEDs to try to light up the plastic, it'll look dim and poor; and you don't want to use the high-brightness LEDs sticking through the front panel, they will blind you!
- On the PCB itself, the individual buttons, LEDs, and diodes are usually not marked. To simplify
 PCB design in KiCad, "assemblies" were created with e.g. an encoder and 16 LEDs, or a button,
 two LEDs, and a diode. This is why they're marked "A21" or whatever. All the diodes are the
 same 1N914 or 1N4148 (or actually any through-hole small signal diode), and each one has a
 cathode marking, so there should never be any confusion. With the exception of the LEDs in the
 LED rings, every LED on the board has an actual diode symbol marked, so there should be no
 confusion about which direction they go (square pad is anode is longer lead). In the LED rings,
 the four quadrant LEDs' directions are marked, and the rest go in the corresponding direction,
 following around the circle (anode always on inside). All the tact switches are also the same-just
 make sure each one is pushed in fully before soldering!

Description	Mouser P/N	Quantity
Encoders; 0.1" board mount with switch; bushing; 24 PPR, 24 detent; etc. If you want to save a couple dollars, you can use the ones without the switch for all the encoders except the datawheel and the four Operator Level encoders-those are the only ones for which the switch is wired up.	652-PEC12R3220FS0024	21
Tact switches; standard, 5mm high	611-PTS645SM502	115
Diodes for button matrix	583-1N4148-T	120
Red LEDs for lighting buttons/caps (4500mcd (!))	604-WP710A10SRC/J4	87
Orange LEDs for lighting buttons/caps (2700mcd (!))	604-WP710A10SEC	9
Yellow LEDs for lighting buttons/caps (3200mcd (!))	859-LTL17KYV3JS	24
Green LEDs for lighting buttons/caps (7200mcd (!))	859-LTL17KTGX3KS	74
Blue LEDs for lighting buttons/caps (1500mcd (!))	859-LTL17KTBS3KS	220
Red LEDs for panel indication (i.e. sticking through holes in front panel) (Tinted, Diffused)	604-WP710A10SRD/D	26
Orange LEDs for panel indication (Tinted, Diffused)	696-SSL-LX3044SOD	7
Yellow LEDs for panel indication (Tinted, Diffused) (For some reason I ended up using these only for the yellow LEDs in the commands display and the load meter, not for the crosspoints in the FM widget; it may have been because I wanted clear-looking LEDs in the FM widget to go with all the other clear/white things there, or because these LEDs are closer to yellow than to amber, and the other LEDs in the FM widget were more amber)	710-151031YS06000	23

Description	Mouser P/N	Quantity
Green LEDs for panel indication (Tinted, Clear-I couldn't get appropriate brightness diffused ones)	859-LTL1CHJGTNN	51
Blue LEDs for panel indication (NOT tinted, Diffused-the picture lies, they're white diffused but light up blue; and actually these are a bit too bright to use for sticking through the front panel. You could fudge something with the resistors supplying these columns to try to reduce the brightness, but I might recommend looking for alternative LEDs.)	593-VAOL-3LSBY1	28
Red/Green 5mm LEDs for FM widget operator nodes (3 wire common ANODE)	696-LLX5099SRSGCCA	4
Large LED display	859-LTC-5623HR	1
Small LED displays	859-LSHD-7501	5
Row drive NMOSFETs (2n7000s aren't strong enough)	689-VN3205N3-G	8
74HC595 shift registers, SOIC-16	511-M74HC595YRM13TR	12
74HC165 shift registers, SOIC-16	863-MC74HC165ADR2G	8
220 ohm x 8 resistor packs, SOIC-16	652-4816P-1LF-220	11
10k ohm x 4 resistor packs, SIL-5 (RP13-RP28, not RP0 and RP1)	858-L051S103LF	16
1k ohm x 4 resistor packs, SIL-5 (these are just RP0 and RP1)	652-4605X-1LF-1K	2
Electrolytic caps (470 uF)	647-UVR1C471MPD	3
Ceramic/film caps (0.1 uF)	Buy by the 100 from eBay	~20
10k dual gang audio taper panel mount pot (OPN2 volume)	313-1240F-10K	1
10k audio taper panel mount pot	858-P160KNPC15A10K	1
5×2 pin header	Buy in larger size (preferably from eBay) and snap off	1

Don't forget: the 2×40 character LCD, the pin header for the LCD, the ribbon cable and IDC connectors for the LCD and front panel, knob caps for the regular encoders, datawheel knob cap for the datawheel, knob caps for the volume pots.

Schematic and Reference Designators

Schematic image (unfortunately, MIDIbox Gallery scaled down the original image, and offsite documentation is frowned upon):

Front panel KiCad project coming soon!

For Color fields, as discussed above, you may change the colors to whatever you want, but it is recommended to keep the colors consistent (e.g. make everything "green" below be the same color, and everything "red" below be a different color). For the Red/Green buttons below, the Red LED is always on the left and the Green LED is always on the right.

Ref. Des.	Туре	Color	Description
A1	Encoder + 16-LED ring	Blue	FM operator parameter "Harmonic" ("FMult")
A2	Encoder + 7-LED ring	Rainbow	FM operator parameter "Detune"

Ref. Des.	Туре	Color	Description
A3	Encoder + 16-LED ring	Blue	FM operator parameter "Atk Rate"
A4	Encoder + 16-LED ring	Blue	FM operator parameter "Dec1 Rate"
A5	Encoder + 16-LED ring	Blue	FM operator parameter "Dec1 Level"
A6	Encoder + 16-LED ring	Blue	FM operator parameter "Dec2 Rate"
A7	Encoder + 16-LED ring	Blue	FM operator parameter "Rel Rate"
A8	Encoder + 16-LED ring	Blue	OPN2 parameter "Ch3 CSM Freq"
A9	Encoder + 16-LED ring	Blue	PSG voice parameter "Freq"
A10	Encoder + 16-LED ring	Blue	PSG voice parameter "Volume"
A11	Button + LED	Red	FM operator parameter "KSR" (Key Scale Rate)
A12	Button + LED	Red	FM operator SSG-EG parameter "On"
A13	Button + LED	Red	FM operator SSG-EG parameter "Init"
A14	Button + LED	Red	FM operator SSG-EG parameter "Toggle"
A15	Button + LED	Red	FM operator SSG-EG parameter "Hold"
A16	Button + LED	Red	FM operator parameter "LFO AM" (LFO \rightarrow operator amplitude modulation toggle)
A17	Button + LED	Red	OPN2 parameter "Ch3 CSM Fast" (originally Timer A fast, now Timer A enable)
A18-A21	Encoder + 16-LED ring	Blue	FM voice parameter "Oper 1 Level" – "Oper 4 Level"
A22	Encoder + 8-LED ring	Blue	FM voice parameter "LFO-Freq Depth" (LFO \rightarrow frequency modulation depth)
A23	Encoder + 4-LED ring	Blue	FM voice parameter "LFO-Amp Depth" (LFO \rightarrow amplitude modulation depth)
A24	Encoder + 8-LED ring	Blue	OPN2 parameter "LFO Freq"
A25	Button + LED	Red	OPN2 parameter "Ugly" (now-famous test bit 0x21:4)
A26	Button + LED	Red	OPN2 parameter "DAC Override" (test bit 0x2C:5)
A27	Button + LED	Red	OPN2 parameter "LFO Enable"
A28	Button + LED	Red	OPN2 parameter "EG Enable" (invert of test bit 0x21:5)
A29-A32	Button + LED	Green	Operator Selection 1-4
A33-A44	Button + 2 LEDs	Red/Green	Genesis 1 Voice Selection: DAC, FM voices 1-6, OPN2 globals, PSG voices 1-3, noise
A45-A56	Button + 2 LEDs	Red/Green	Genesis 2 Voice Selection: DAC, FM voices 1-6, OPN2 globals, PSG voices 1-3, noise
A57	Encoder + 8-LED ring	Blue	OPN2 voice parameter "Feedback"
A58-A69	Button + 2 LEDs	Red/Green	Genesis 3 Voice Selection: DAC, FM voices 1-6, OPN2 globals, PSG voices 1-3, noise
A70-A81	Button + 2 LEDs	Red/Green	Genesis 4 Voice Selection: DAC, FM voices 1-6, OPN2 globals, PSG voices 1-3, noise
A82	Button + LED	Red	OPN2 parameter "DAC Enable"
A83	Button + LED	Green	System Mode
A84	Button + LED	Green	Voice Mode
A85	Button + LED	Green	Channel Mode
A86	Button + LED	Green	Program Mode
A87	Button + LED	Green	VGM Editor Mode
A88	Button + LED	Green	Modulator Mode
A89	Button + LED	Green	Sample Mode
A90	Button + LED	Red	Mute

Ref. Des.	Туре	Color	Description
A91	Button + LED	Red	Solo
A92	Button + LED	Red	Release
A93	Button + LED	Red	Panel Override
A94	Button + LED	Green	Restart
A95	Button + LED	Green	Play
A96	Button + LED	Green	Reset
A97	Button + LED	Green	Load
A98	Button + LED	Green	Save
A99	Button + LED	Green	New
A100	Button + LED	Green	Delete
A101	Button + LED	Green	Сгор
A102	Button + LED	Green	Capture
A103	Button + LED	Green	Duplicate
A104	Button + LED	Green	Paste
A105	Button + LED	Red/Green	Ctrl
A106	Button + LED	Red/Green	Time
A107	7-LED Column	Red	VGM Commands Display: Ctrl
A108	7-LED Column	Red	VGM Commands Display: Time
A109	7-LED Column	Yellow	VGM Commands Display: OPN2
A110	7-LED Column	Green	VGM Commands Display: FM 1
A111	7-LED Column	Green	VGM Commands Display: FM 2
A112	7-LED Column	Green	VGM Commands Display: FM 3
A113	7-LED Column	Green	VGM Commands Display: FM 4
A114	7-LED Column	Green	VGM Commands Display: FM 5
A115	7-LED Column	Green	VGM Commands Display: FM 6
A116	7-LED Column	Orange	VGM Commands Display: DAC
A117	7-LED Column	Blue	VGM Commands Display: OP/SQ 1
A118	7-LED Column	Blue	VGM Commands Display: OP/SQ 2
A119	7-LED Column	Blue	VGM Commands Display: OP/SQ 3
A120	7-LED Column	Blue	VGM Commands Display: OP4/NS
A121	Button + LED	Green	Commands View
A122	Button + LED	Green	State View
A123	Button + LED	Red	Group
C1-C20	Capacitor	N/A	0.1uF ceramic or film capacitors for chips
C21-C23	Capacitor	N/A	470uF electrolytic capacitors for power rails, reverse mounted
D1-D5	Diode	N/A	Diodes for encoder buttons; all normal button diodes included in Assembly or Switch
DS1	LED Display	Red	Main Display
DS2	LED Display	Red	Octave
DS3-DS6	LED Display	Red	Frequency
E1	Encoder	N/A	OPN2 voice parameter "Octave"
E2	Encoder	N/A	OPN2 voice parameter "Frequency"
E3	Encoder	N/A	Datawheel
LD1-LD3	LED	Red	OPN2 Ch3 Mode

Ref. Des.	Туре	Color	Description
LD4-LD7	LED	Red	PSG Noise Freq
LD8-LD9	LED	Red	PSG Noise Type
LD10, LD16	LED	Yellow	FM Voice Output
LD11-LD14,			
LD24-LD29,	IFD	Yellow	FM Widget Path
LD37-LD40,		I CHOW	
LD48-LD49			
LD15, LD17,			
LD22, LD23,	I FD	Orange	DAC VU Meter
LD36, LD42,		orunge	
LD44			
LD18-LD21	Bicolor LED	Red/Green	FM Widget Operator Node
LD33-LD35,			
LD45-LD46,	LED	Yellow	FM Widget Path Node
LD51		Ded	EM Wident Fredhadk
		кеа	FM WIdget Feedback
LD41, LD43, LD47, LD50	LED	Yellow	Key On
R1-R2	Resistors	N/A	2.2k terminating resistors for clock and latch lines
RP0-RP1	Resistor Packs	N/A	1k row driver pull-ups (to reduce ghosting)
RP2-RP12	Resistor Packs	N/A	220 ohm LED column current limiters
RP13-RP28	Resistor Packs	N/A	10k button column pull-ups
S1	Button	N/A	OPN2 Ch3 Mode
S2	Button	N/A	PSG Noise Freq
S3	Button	N/A	PSG Noise Type
S4	Button	N/A	FM Voice Output
S5	Button	N/A	Algorithm
S6	Button	N/A	Key On
S7	Button	N/A	Mark Beginning
S8	Button	N/A	Move Up
S9	Button	N/A	Up One Command
S10	Button	N/A	Up One State
S11	Button	N/A	Mark End
S12	Button	N/A	Move Down
S13	Button	N/A	Down One Command
S14	Button	N/A	Down One State
S15	Button	N/A	Menu
S16-S23	Button	N/A	Softkeys
S24	Button	N/A	Enter
TF1	Triforce	Red	Triforce of Power
TF2	Triforce	Blue	Triforce of Wisdom
TF3	Triforce	Green	Triforce of Courage
U1-U12	IC	N/A	74HC595 Output Shift Register, SMD
U13-U20	IC	N/A	74HC165 Input Shift Register, SMD

Custom PCB / Veroboard Info

This is the mapping for the MBQG_FP board itself-if you have the commercially produced PCB from Sauraen, you don't need this info because it's already in the copper!

MIDIbox Quad Genesis supports its front panel controls in any valid MIDIbox button-LED matrix configuration, with the following restrictions:

DOUT Restrictions

- The same BLM must be used for buttons and LEDs, and it must have 8 rows.
- LED display digits must be common anode, connected with their anode to a DOUT shift register pin, and their cathodes to the row lines in the order 0-7 = A-B-C-D-E-F-G-DP.

DIN Restrictions

- The same BLM must be used for buttons and LEDs, and it must have 8 rows.
- Encoders must have their common pin grounded, and their two switching pins directly connected to two DIN shift register pins (not in the matrix).

For now, the mapping is hard-coded in frontpanel.c, but eventually (if there is interest), it will be read from a text-based configuration file on the SD card upon startup. If you match the matrix maps below, you won't need to edit this at all.

DOUT Matrix Map

Syntax:

- X = no item
- B = button
- EB = encoder button (push)
- L = LED
- R = Red
- G = Green
- G# = Genesis #
- O# = LED Ring Segment # (counted from bottom, clockwise)
- LW# = LED, FM Widget, Reference Designator # (since there is no good way to label the individual widget segments)

All LED display digits are wired, from rows 0 to 7: A-B-C-D-E-F-G-DP

VGM Commands Matrix is wired, from top to bottom, 0-1-2-3-4-5-6 (row 7 not used for any columns)

Counting the individual segments in the LED displays, there are 638 LEDs on the front panel.

2025/07/22 21:17	

-	'	_	-	

SR	IDX	BIT	0	1	2	3	4	5	6	7
		0		1	R	OW0 DRIVER (A	ACTIVE HIGH)	1	1	1
		1			R	OW1 DRIVER (A	ACTIVE HIGH)			
		2			R	OW2 DRIVER (A	CTIVE HIGH)			
		3			R	OW3 DRIVER (A	ACTIVE HIGH)			
U1	1	4			R	OW4 DRIVER (A	ACTIVE HIGH)			
		5			R	OW5 DRIVER (A	CTIVE HIGH)			
		6			R	OW6 DRIVER (A	ACTIVE HIGH)			
		7			R	OW7 DRIVER (A	ACTIVE HIGH)			
		0	LR_G1_DAC	LG_G1_DAC	LR_G2_DAC	LG_G2_DAC	LR_G3_DAC	LG_G3_DAC	LR_G4_DAC	LG_G4_DAC
		1	LR_G1_V1	LG_G1_V1	LR_G2_V1	LG_G2_V1	LR_G3_V1	LG_G3_V1	LR_G4_V1	LG_G4_V1
		2	LR_G1_V2	LG_G1_V2	LR_G2_V2	LG_G2_V2	LR_G3_V2	LG_G3_V2	LR_G4_V2	LG_G4_V2
	2	3	LR_G1_V3	LG_G1_V3	LR_G2_V3	LG_G2_V3	LR_G3_V3	LG_G3_V3	LR_G4_V3	LG_G4_V3
02	2	4	LR_G1_V4	LG_G1_V4	LR_G2_V4	LG_G2_V4	LR_G3_V4	LG_G3_V4	LR_G4_V4	LG_G4_V4
		5	LR_G1_V5	LG_G1_V5	LR_G2_V5	LG_G2_V5	LR_G3_V5	LG_G3_V5	LR_G4_V5	LG_G4_V5
		6	Х	Х	Х	Х	LFOFREQ_04	LFOFREQ_05	LFOFREQ_06	LFOFREQ_07
		7	Х	Х	Х	Х	LFOFREQ_011	LFOFREQ_010	LFOFREQ_09	LFOFREQ_08
		0	LR_G1_V6	LG_G1_V6	LR_G2_V6	LG_G2_V6	LR_G3_V6	LG_G3_V6	LR_G4_V6	LG_G4_V6
		1	LR_G1_OPN2	LG_G1_OPN2	LR_G2_OPN2	LG_G2_OPN2	LR_G3_OPN2	LG_G3_OPN2	LR_G4_OPN2	LG_G4_OPN2
		2	LG_CTRL	X	LR_CTRL	X	LG_TIME	L_CMDS	LR_TIME	L_STATE
U3	3	3	L_GROUP	L_MUTE	L_RESTART	L_SOLO	L_PLAY	L_RELEASE	L_RESET	L_PNLOVR
		4	LR_G1_S1	LG_G1_S1	LR_G2_S1	LG_G2_S1	LR_G3_S1	LG_G3_S1	LR_G4_S1	LG_G4_S1
		5	LR_G1_S2	LG_G1_S2	LR_G2_S2	LG_G2_S2	LR_G3_S2	LG_G3_S2	LR_G4_S2	LG_G4_S2
		6	LR_G1_S3	LG_G1_S3	LR_G2_S3	LG_G2_S3	LR_G3_S3	LG_G3_S3	LR_G4_S3	LG_G4_S3
		7	LR_G1_NOISE	LG_G1_NOISE	LR_G2_NOISE	LG_G2_NOISE	LR_G3_NOISE	LG_G3_NOISE	LR_G4_NOISE	LG_G4_NOISE
		0	X	X	X	X	X	L_CH3NORM	L_CH34FREQ	L_CH3CSM
		1	X	X	L_EG	L_LFO	L_DACOVR		L_CH3FAST	X
	4	2				L_SSGON	L_SSGINIT	L_SSGIGL	L_SSGHOLD	
U4		3								
		4	PSGVOL_015	PSGVOL_014		PSGVOL_012	PSGVOL_011	PSGVOL_010	PSGVOL_09	PSGVOL_00
		6	PSGEREO 015	PSGEREO 014	PSGEREO 013	PSGEREO 012	PSGEREO 011	PSGEREO 010	PSGEREO OR	PSGEREO OR
		7	PSGEREO OO	PSGEREO 01	PSGEREO 02	PSGEREO 03	PSGEREO 04	PSGEREO 05	PSGEBEO OG	PSGEREO 07
		0	RELIBATE 015	RELIBATE 014	RELEATE 013	RELEATE 012	RELEATE 011	RELEATE 010	RELEATE OP	RELEATE OR
		1	RELIGITE_015	RELIGITE_01	RELIGITE_025	RELIGITE_012	RELIGITE_011	RELEATE 05	RELIGATE OG	RELIGITE_00
		2	CSMFREO 015	CSMFREO 014	CSMFREO 013	CSMFREO 012	CSMFREO 011	CSMFREO 010	CSMFREO 09	CSMFREO 08
		3	CSMFREO O0	CSMFREO 01	CSMFREO 02	CSMFREO 03	CSMFREO 04	CSMFREO 05	CSMFREO 06	CSMFREO 07
05	5	4	DECLVL 015	DECLVL 014	DECLVL 013	DECLVL 012	DECLVL 011	DECLVL 010	DECLVL 09	DECLVL 08
		5	DECLVL 00	DECLVL 01	DECLVL 02	DECLVL 03	DECLVL 04	DECLVL 05	DECLVL 06	DECLVL 07
		6	DEC2R 015	DEC2R 014	DEC2R 013	DEC2R 012	DEC2R 011	DEC2R 010	DEC2R 09	DEC2R 08
		7	DEC2R_00	DEC2R_01	DEC2R_02	DEC2R_03	DEC2R_04	DEC2R_05	DEC2R_06	DEC2R_07
		0	DEC1R_015	DEC1R_014	DEC1R_013	DEC1R_012	DEC1R_011	DEC1R_010	DEC1R_09	DEC1R_08
		1	DEC1R_00	DEC1R_01	DEC1R_02	DEC1R_03	DEC1R_04	DEC1R_05	DEC1R_06	DEC1R_07
		2	ATTACK_015	ATTACK_014	ATTACK_013	ATTACK_012	ATTACK_011	ATTACK_010	ATTACK_09	ATTACK_08
116	6	3	ATTACK_00	ATTACK_01	ATTACK_02	ATTACK_03	ATTACK_04	ATTACK_05	ATTACK_06	ATTACK_07
00	0	4	Х	X	X	Х	DETUNE_011	DETUNE_010	DETUNE_09	DETUNE_08
		5	Х	X	X	Х	X	DETUNE_05	DETUNE_06	DETUNE_07
		6	HARM_015	HARM_014	HARM_013	HARM_012	HARM_011	HARM_010	HARM_09	HARM_08
		7	HARM_O0	HARM_01	HARM_02	HARM_03	HARM_04	HARM_05	HARM_06	HARM_07
		0	OP1LVL_O0	OP1LVL_01	OP1LVL_O2	OP1LVL_O3	OP1LVL_04	OP1LVL_05	OP1LVL_O6	OP1LVL_07
		1	OP1LVL_015	OP1LVL_014	OP1LVL_013	OP1LVL_012	OP1LVL_011	OP1LVL_010	OP1LVL_O9	OP1LVL_08
		2	OP2LVL_O0	OP2LVL_01	OP2LVL_O2	OP2LVL_O3	OP2LVL_04	OP2LVL_05	OP2LVL_O6	OP2LVL_07
U7	7	3	OP2LVL_015	OP2LVL_014	OP2LVL_013	OP2LVL_012	OP2LVL_011	OP2LVL_010	OP2LVL_09	OP2LVL_08
		4			FREQ	UENCY DIGIT 3	COMMON ANOE)E		
		5			FREQ	UENCY DIGIT 2	COMMON ANOD)E		
		6			FREQ	UENCY DIGIT 1	COMMON ANOE)E		
		7			00	TAVE DIGIT CO	MMON ANODE			

SR	IDX	BIT	0	1	2	3	4	5	6	7		
		0	OP3LVL_O0	OP3LVL_01	OP3LVL_O2	OP3LVL_O3	OP3LVL_04	OP3LVL_05	OP3LVL_O6	OP3LVL_07		
		1	OP3LVL_015	OP3LVL_014	OP3LVL_013	OP3LVL_012	OP3LVL_011	OP3LVL_010	OP3LVL_O9	OP3LVL_O8		
		2	OP4LVL_O0	OP4LVL_01	OP4LVL_02	OP4LVL_O3	OP4LVL_04	OP4LVL_05	OP4LVL_O6	OP4LVL_07		
110	0	3	OP4LVL_015	OP4LVL_014	OP4LVL_013	OP4LVL_012	OP4LVL_011	OP4LVL_010	OP4LVL_O9	OP4LVL_08		
00	0	4	Х	Х	Х	Х	LFOFDEP_04	LFOFDEP_05	LFOFDEP_06	LFOFDEP_07		
		5	Х	Х	Х	Х	LFOFDEP_011	LFOFDEP_010	LFOFDEP_09	LFOFDEP_08		
		6	Х	Х	Х	Х	LFOADEP_04	LFOADEP_010	LFOADEP_06	LFOADEP_08		
		7			FREQ	UENCY DIGIT 4	COMMON ANOE	DE				
		0	Х	Х	Х	Х	L_DACB9	L_DACENAB	LW46	Х		
		1	LW45	LW48	LW51	LW49	L_KON1	L_KON2	L_KON3	L_KON4		
		2	FEEDBACK_011	FEEDBACK_010	FEEDBACK_09	FEEDBACK_08	L_DACB5	L_DACB6	L_DACB7	L_DACB8		
110	۵	3	FEEDBACK_04	FEEDBACK_05	FEEDBACK_6	FEEDBACK_7	L_DACB1	L_DACB2	L_DACB3	L_DACB4		
03		4	LW32	LW33	LW37	LW38	LW34	LW39	LW40	LW35		
		5	L_OUTL	L_OUTR	LW24	LW25	LW26	LW27	LW28	LW29		
		6	LR_OP1	LG_OP1	LR_OP2	LG_OP2	LR_OP3	LG_OP3	LR_OP4	LG_OP4		
		7	L_SELO1	L_CARRO1	L_SELO2	L_CARRO2	L_SELO3	L_CARRO3	L_SELO4	L_CARRO4		
		0	MAIN DIGIT 4 COMMON ANODE									
		1	MAIN DIGIT 3 COMMON ANODE									
		2	MAIN DIGIT 2 COMMON ANODE									
1110	10	3			M	AIN DIGIT 1 COM	MON ANODE					
010	10	4	L_RAM0	L_RAM1	L_RAM2	L_RAM3	L_RAM4	L_RAM5	L_RAM6	L_RAM7		
		5	L_CHIP0	L_CHIP1	L_CHIP2	L_CHIP3	L_CARD3	L_CARD2	L_CARD1	L_CARD0		
		6	L_LOAD	L_CROP	L_SAVE	L_CAPTURE	L_NEW	L_DUPL	L_DELETE	L_PASTE		
		7	L_PROG	X	L_VGM	L_SYSTEM	L_MDLTR	L_VOICE	L_SAMPLE	L_CHAN		
		0			VGM CO	MMANDS MATR	IX COLUMN 7: F	-M 4				
		1			VGM CO	MMANDS MATR	IX COLUMN 6: F	FM 3				
		2			VGM CO	MMANDS MATR	IX COLUMN 5: F	-M 2				
1111	11	3			VGM CO	MMANDS MATR	IX COLUMN 4: F	FM 1				
011		4			VGM CO	MMANDS MATR	IX COLUMN 3: C	DPN2				
		5			VGM CO	MMANDS MATR	IX COLUMN 2: 1	ГІМЕ				
		6			VGM CO	MMANDS MATR	IX COLUMN 1: 0	CTRL				
		7				Х						
		0				Х						
		1			VGM COM	MANDS MATRIX	COLUMN 14: O	P4/NS				
		2			VGM COM	MANDS MATRIX	COLUMN 13: O	P/SQ 3				
1112	12	3			VGM COM	MANDS MATRIX	COLUMN 12: O	P/SQ 2				
012		4			VGM COMI	MANDS MATRIX	COLUMN 11: O	P/SQ 1				
		5			VGM CO	MMANDS MATR	IX COLUMN 10:	DAC				
		6			VGM CO	MMANDS MATR	IX COLUMN 9: F	-M 6				
		7			VGM CO	MMANDS MATR	IX COLUMN 8: F	-M 5				

DIN Matrix Map

SR	IDX	BIT	0	1	2	3	4	5	6	7	
		0				OP4LVL E	NCODER A				
		1				OP4LVL E	NCODER B				
		2 LFOFDEP ENCODER B									
1112	1	3				LFOFDEP	ENCODER A				
013	1	4				LFOADEP	ENCODER B				
			5				LFOADEP	ENCODER A			
		6				LFOFREQ	ENCODER A				
	7 LFOFREQ ENCODER B										

SR	IDX	BIT	0	1	2	3	4	5	6	7			
		0	B_MENU	B_G1_V2	Х	B_G2_V2	X	B_G3_V2	B_ENTER	B_G4_V2			
U14 2		1	B_SOFT1	B_G1_V3	B_SOFT2	B_G2_V3	B_SOFT3	B_G3_V3	B_SOFT4	B_G4_V3			
		2	B SOFT5	B G1 V4	B SOFT6	B G2 V4	B SOFT7	B G3 V4	B SOFT8	B G4 V4			
	_	3	B_MARKST	B_G1_V5	B_MOVEUP	B_G2_V5	B_MARKEND	B_G3_V5	B_MOVEDN	B_G4_V5			
014	2	4	Х	B_G1_V1	Х	B_G2_V1	Х	B_G3_V1	Х	B_G4_V1			
		5	Х	B_G1_DAC	Х	B_G2_DAC	Х	B_G3_DAC	Х	B_G4_DAC			
		6	B_SELO1	B_OUT	B_SELO2	B_ALG	B_SELO3	B_DACEN	B_SELO4	B_KON			
		7	Х	Х	Х	Х	EB_OP1LVL	EB_OP2LVL	EB_OP3LVL	EB_OP4LVL			
		0	Х	B_G1_V6	Х	B_G2_V6	Х	B_G3_V6	Х	B_G4_V6			
		1	Х	B_G1_OPN2	Х	B_G2_OPN2	Х	B_G3_OPN2	Х	B_G4_OPN2			
		2	Х	B_G1_S1	Х	B_G2_S1	Х	B_G3_S1	Х	B_G4_S1			
1115	2	3	Х	B_G1_S2	Х	B_G2_S2	Х	B_G3_S2	Х	B_G4_S2			
015	5	4	Х	B_G1_S3	Х	B_G2_S3	Х	B_G3_S3	Х	B_G4_S3			
		5	Х	B_G1_NOISE	Х	B_G2_NOISE	Х	B_G3_NOISE	Х	B_G4_NOISE			
		6	B_NSTYPE	B_NSFREQ	B_EG	B_LFO	B_DACOVR	B_UGLY	B_FAST	B_CH3MODE			
		7	Х	Х	B_KSR	B_SSGON	B_SSGINIT	B_SSGTGL	B_SSGHOLD	B_LFOAM			
		0				CSMFREQ	ENCODER A						
		1		CSMFREQ ENCODER B									
		2		RELRATE ENCODER A									
1116	1	3		RELRATE ENCODER B									
010	4	4	PSGFREQ ENCODER A										
		5	PSGFREQ ENCODER B										
		6	PSGVOL ENCODER A										
		7	PSGVOL ENCODER B										
		0				DEC2R E	NCODER B						
		1	DEC2R ENCODER A										
		2	DECLVL ENCODER B										
U17	5	3	DECLVL ENCODER A										
		4				DEC1R E	NCODER B						
		5				DEC1R E	NCODER A						
		6				FREQ EN	ICODER B						
		7				FREQ EN	NCODER A						
		0				ATTACK E	ENCODER B						
		1				ATTACK E	INCODER A						
		2				DETUNE E	ENCODER B						
U18	6	3				DETUNE E	ENCODER A						
		4				HARM EI	NCODER B						
		5				HARM EI	NCODER A						
		6				OCTAVE E	ENCODER B						
		7				OCTAVE E	ENCODER A						
		0				OP2LVL E	NCODER B						
		1				OP2LVL E	NCODER A						
		2				OP3LVL E	NCODER B						
U19	7	3				OP3LVL E	NCODER A						
		4				OP1LVL E	NCODER B						
		5				OP1LVL E	NCODER A						
		6				FEEDBACK	ENCODER B						
		7				FEEDBACK	ENCODER A						

SR	IDX	BIT	0	1	2	3	4	5	6	7
U20	8	0	DATAWHEEL ENCODER B							
		1	DATAWHEEL ENCODER A							
		2	Х							
		3	X							
		4	B_CTRL	B_CMDDN	B_CMDUP	B_STATEDN	B_TIME	B_CMDS	B_STATEUP	B_STATE
		5	B_LOAD	B_CROP	B_SAVE	B_CAPTURE	B_NEW	B_DUPL	B_DELETE	B_PASTE
		6	B_GROUP	B_MUTE	B_RESTART	B_SOLO	B_PLAY	B_RELEASE	B_RESET	B_PNLOVR
		7	B PROG	EB DATAWHL	B VGM	B SYSTEM	B MDLTR	B VOICE	B SAMPLE	B CHAN

3D Printed Items

The buttons on MBQG_FP consist simply of a 5mm tact switch and up to 2 3mm LEDs on the front panel board, and a 3D printed, transparent plastic button cap which sits loosely on top. It is held in by the front panel, its flanges, and the button and LEDs underneath.

MBQG_FP also uses a number of LED pipes, which are 3D printed, transparent pieces which are held in the slots of the aluminum front panel by friction, and which are intended to cause the slot to light up uniformly when lit underneath by an LED. The original version used LED pipes for all the LED rings, but since this was extremely tedious, I recommend only using the LED pipes for the FM Widget and the DAC VU meter.

Things You Should Know If Having These Printed

- You need 115 buttons and 26 LED pipes, assuming you're not using LED pipes for all the LED rings. However, especially if the 3D printer (machine and/or person) is inexperienced, you will need lots of extras. For the LED pipes, because they are friction-fit, buy at least double the number you will need; and for the buttons, at least 20 extra or so.
- The total cost to have these items printed should be roughly \$20-\$30 plus shipping. If someone is trying to charge you more than that, either there's an issue (like they got the scale wrong and think you want giant-sized parts), or they're trying to gyp you.

Things You Need to Tell the Person Printing Them

- The scale in the STL files is 1 INCH, not 1 mm. The buttons should be about 1/2" or 12mm wide. (This is not intended as an engineering dimension, just as a sanity check-use the actual dimensions in the file.)
- Either ABS or PLA transparent filament should work. I had the guy who made them for me do tests with both, and I liked the light-up appearance of the ABS better but the "off" appearance of the PLA better. But they were pretty similar.
- I had the guy who made them for me do tests with different fill rates, and if I remember correctly around 10% fill worked best. 100% fill would be needlessly expensive and would dim the LEDs.
- The buttons need to be printed with the flanges and the cutout down, and the beveled rectangular surface up. The LED pipes need to be printed with the flat surface down and the crown-shaped end up.

Downloads

(You must be logged in with your MIDIbox Forum account to access the downloads)

mbqg_fp_buttons.stl

mbqg_fp_ledpipes.stl

Assembly Guide

Once you have your front panel PCB, your aluminum front panel, and all the other parts, here's some tips for the assembly process.

- 1. Begin by soldering all the SMD shift registers and resistor packs. The pads aren't very big (if I had known, I would have made them bigger...), and I had a lot of issues with bad connections because a leg which looked soldered wasn't actually attached. If you have access to solder paste and a heat gun, use that. If not, apply solder to two corner pads on the board, place the chip on and melt those two legs into the solder to connect them. Adjust the position so that all the pins line up correctly. Then solder the rest of the legs, making sure to press down firmly with the iron on each leg just before applying the solder, in hopes that the leg will conduct heat to the copper and then when you apply the solder it will flow across the two.
- 2. Solder the diodes, the two discrete resistors, the through-hole resistor packs, and the ceramic capacitors.
- 3. Solder all the tactile switches. Only solder two pins of each switch to start, and make absolutely sure every single button is seated fully before soldering the remaining two pins. If the switch isn't seated fully, the 3D printed button will bind and it may prevent the front panel from going together well.
- 4. Solder all the LEDs which are under buttons or LED pipes. Make sure each is also fully seated, and ideally, pointing as close to straight up as possible. Again, the panel won't go together right if any are sticking out, and buttons may bind if the LEDs under them are a little tilted.
- 5. For each region of LEDs which stick through the front panel: Insert the LEDs into the board. Stick a couple screws in the area up through from under the board (backwards). Drop a 1/4" nylon standoff/spacer and a thin washer on top of each, and then slide the front panel down onto the screws. Secure them with a nut. Now flip over the assembly and drop/push each LED into the hole in the aluminum. Hold up the assembly and make sure all the LEDs are pushed in uniformly. Solder the LEDs.
- 6. For the above step, if these are LEDs around an encoder, instead of securing the front panel with screws while soldering, solder in the encoder before you begin the process, and then use the encoder (with its nut) to hold the front panel to the aluminum while pushing in and soldering the LEDs. Make sure of course that the encoder is seated fully! If the encoder's mounting tabs have trouble going through the mounting holes, bend them a bit with pliers-they will eventually fit smoothly. Make sure to use plenty of solder (and plenty of heat) on the mounting tabs.
- 7. For the LED displays, do a similar process to with the LEDs to ensure they fit correctly in the front panel and are flush with its surface. I used a small piece of wood to hold the displays flush with the surface while soldering them-"pushed in all the way" will not be flush with the surface, it will be below the surface.
- 8. Make sure to mount the electrolytic capacitors behind the front panel, i.e. on the opposite side from all the other components.

Final Assembly

Once you have finished the board and tested it on its own, it's time to put it all together.

- 1. Insert all the LED pipes in the aluminum. May take elbow grease as the aluminum "cuts" plastic off the sides of them to fit.
- 2. Insert long (~5cm) M3 or 4-40 screws through all the holes in the aluminum, in the correct direction. Sit the front panel on your table with the screws sticking up (back side up).
- 3. Lay all the 3D printed buttons in the appropriate cutouts, making sure to get the LED cutout pointing in the correct direction.
- 4. Add a thin flat washer and a 1/4" nylon standoff/spacer to each screw.
- 5. Slip the front panel PCB down over all the screws. The encoders will hold it up against the table through the holes.
- 6. Loosely cap each screw with a nut.
- 7. Pick up the aluminum so that the front panel PCB slips down into all the holes. Press the PCB where necessary and ensure that the LEDs are in their holes and everything is tightly together.
- 8. Loosely tighten all the nuts.
- 9. For each screw, loosen and remove the nut, then take another screw and put its tip against the tip of the screw sticking through the assembly. Slide the two screws down through the assembly, so that you have now exchanged the original long screw pointing correctly with a screw pointing backwards (out the front of the panel). Then, take your screw of final length, push it against the tip of the backwards screw, and slide them through, so the screw of final length is in its final position. Add a small lockwasher and the nut, and tighten. The purpose of this is to exchange the long screw for a shorter screw without risking the washer and spacer getting dislodged.
- 10. Make sure none of the nuts you use are big enough that they touch any of the soldered connections, especially the ones in the middle of the voice selection buttons.
- 11. Once all the screws are in place, flip over the panel and add the washer and nut to each encoder.
- 12. Finally, hand-tighten all the screws between the screw head in front and the nut in back.

From: http://wiki.midibox.org/ - MIDIbox

Permanent link: http://wiki.midibox.org/doku.php?id=mbqg_fp&rev=1486697919



Last update: 2017/02/10 03:38