

MIDIBox AY 3 8912 - Controllers

- **CONTROLLER 01 - ENVELOPE SHAPE CONTROL:**

- Value 00-07 dec. ⇒ ENVELOPE SHAPE 0
- Value 08-15 dec. ⇒ ENVELOPE SHAPE 1
- Value 16-23 dec. ⇒ ENVELOPE SHAPE 2
- Value 24-31 dec. ⇒ ENVELOPE SHAPE 3
- Value 32-39 dec. ⇒ ENVELOPE SHAPE 4
- Value 40-47 dec. ⇒ ENVELOPE SHAPE 5
- Value 48-55 dec. ⇒ ENVELOPE SHAPE 6
- Value 56-63 dec. ⇒ ENVELOPE SHAPE 7
- Value 64-71 dec. ⇒ ENVELOPE SHAPE 8
- Value 72-79 dec. ⇒ ENVELOPE SHAPE 9
- Value 80-87 dec. ⇒ ENVELOPE SHAPE 10
- Value 88-95 dec. ⇒ ENVELOPE SHAPE 11
- Value 96-103 dec. ⇒ ENVELOPE SHAPE 12
- Value 104-111 dec. ⇒ ENVELOPE SHAPE 13
- Value 112-119 dec. ⇒ ENVELOPE SHAPE 14
- Value 120-127 dec. ⇒ ENVELOPE SHAPE 15
- See ENVELOPE SHAPE ⇒ http://www.midibox.org/dokuwiki/midibox_ay_3_8912_envelope
- **CONTROLLER 02 - GLOBAL ENVELOPE FINE** 0-127 (128-255 with +128 OFFSET CC3)
- **CONTROLLER 03 - GLOBAL ENVELOPE FINE +128 OFFSET** (Value 0 ⇒ NO OFFSET, Value 1-128 ⇒ OFFSET +128)
- **CONTROLLER 04 - GLOBAL ENVELOPE COARSE** 0-127 (128-255 with +128 OFFSET CC5)
- **CONTROLLER 05 - GLOBAL ENVELOPE COARSE +128 OFFSET** (Value 0 ⇒ NO OFFSET, Value 1-128 ⇒ OFFSET +128)
- **CONTROLLER 06 - GLOBAL NOISE PERIOD** (Value 0-127 ⇒ 0-31 NIOSE PERIOD)
- **CONTROLLER 07 - VOLUME A** (Value 0-127 ⇒ 0-15 VOLUME)
- **CONTROLLER 08 - VOLUME B** (Value 0-127 ⇒ 0-15 VOLUME)
- **CONTROLLER 09 - VOLUME C** (Value 0-127 ⇒ 0-15 VOLUME)
- **CONTROLLER 10** - Value 1-127 = Tone A ON / Value 0 = Tone A OFF
- **CONTROLLER 11** - Value 1-127 = Tone B ON / Value 0 = Tone B OFF
- **CONTROLLER 12** - Value 1-127 = Tone C ON / Value 0 = Tone C OFF
- **CONTROLLER 13** - Value 1-127 = Noise A ON / Value 0 = Noise A OFF
- **CONTROLLER 14** - Value 1-127 = Noise B ON / Value 0 = Noise B OFF
- **CONTROLLER 15** - Value 1-127 = Noise C ON / Value 0 = Noise C OFF
- **CONTROLLER 16** - Value "Envelope Mode" Tone A on/off - Value 0 = OFF / Value 1-127 = ON
- **CONTROLLER 17** - Value "Envelope Mode" Tone B on/off - Value 0 = OFF / Value 1-127 = ON
- **CONTROLLER 18** - Value "Envelope Mode" Tone C on/off - Value 0 = OFF / Value 1-127 = ON
- **CONTROLLER 19** - Value "Velocity Mode" Tone A on/off - Value 0 = OFF / Value 1-127 = ON
- **CONTROLLER 20** - Value "Velocity Mode" Tone B on/off - Value 0 = OFF / Value 1-127 = ON
- **CONTROLLER 21** - Value "Velocity Mode" Tone C on/off - Value 0 = OFF / Value 1-127 = ON
- **CONTROLLER 22** - Value "Noise Period to Velocity" ON/OFF
- Value 0 ⇒ "Velocity to Noise Period" = OFF
- Value 1 ⇒ "Velocity to Noise Period" = ON [Take Velocity from MIDI Channel TONE A]
- Value 2 ⇒ "Velocity to Noise Period" = ON [Take Velocity from MIDI Channel TONE B]
- Value 3 ⇒ "Velocity to Noise Period" = ON [Take Velocity from MIDI Channel TONE C]
- Value > 3 ⇒ NOT effective
- Note: CC22 is effective on MIDI Channel Tone A or B or C

(MIDIBox AY 8912 V0.04b, 28.11.2008)

More to come...

From:

<http://wiki.midibox.org/> - **MIDIbox**

Permanent link:

http://wiki.midibox.org/doku.php?id=midibox_ay_3_8912_cc_list&rev=1227886183



Last update: **2008/11/28 15:29**