

# Default Encoder Assignments

Each of the different engines have slightly different functions for the encoders but this should give you a list of the most common ones.

You can change them but this will give you a point of reference.

## JD1

D0/D1 = LF0 Rate  
D2/D3 = Envelope Release  
D4/D5 = LF0 Depth  
D6/D7 = Menu

## JD2

D0/D1 = Oscillator Sustain  
D2/D3 = Envelope Decay  
D4/D5 = Oscillator Release  
D6/D7 = Envelope Sustain

## JD3

D0/D1 = Oscillator Attack  
D2/D3 = Envelope Depth  
D4/D5 = Oscillator Decay  
D6/D7 = Envelope Attack

## JD4

D0/D1 = ????  
D2/D3 = Filter Cutoff  
D4/D5 = Oscillator Delay  
D6/D7 = Filter Resonance

[resume writing services](#)

Last update:

2011/07/12 14:03 default\_encoder\_assignments [http://www.midibox.org/dokuwiki/doku.php?id=default\\_encoder\\_assignments&rev=1310475819](http://www.midibox.org/dokuwiki/doku.php?id=default_encoder_assignments&rev=1310475819)

---

From:

<http://www.midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:

[http://www.midibox.org/dokuwiki/doku.php?id=default\\_encoder\\_assignments&rev=1310475819](http://www.midibox.org/dokuwiki/doku.php?id=default_encoder_assignments&rev=1310475819)

Last update: **2011/07/12 14:03**

