

Default Encoder Assignments

Each of the different engines have slightly different functions for the encoders but this should give you a list of the most common ones.

You can change them but this will give you a point of reference.

JD1

```
D0/D1 = LF0 Rate  
D2/D3 = Envelope Release  
D4/D5 = LF0 Depth  
D6/D7 = Menu
```

JD2

```
D0/D1 = Oscillator Sustain  
D2/D3 = Envelope Decay  
D4/D5 = Oscillator Release  
D6/D7 = Envelope Sustain
```

JD3

```
D0/D1 = Oscillator Attack  
D2/D3 = Envelope Depth  
D4/D5 = Oscillator Decay  
D6/D7 = Envelope Attack
```

JD4

```
D0/D1 = ????  
D2/D3 = Filter Cutoff  
D4/D5 = Oscillator Delay  
D6/D7 = Filter Resonance
```

[resume writing services](#)

Last update:
2011/07/12 13:03

default_encoder_assignments http://wiki.midibox.org/doku.php?id=default_encoder_assignments&rev=1310475819

From:

<http://wiki.midibox.org/> - **MIDIbox**

Permanent link:

http://wiki.midibox.org/doku.php?id=default_encoder_assignments&rev=1310475819



Last update: **2011/07/12 13:03**