

MB SEQ functions - quick reference

#	Function	Description / Options
Dedicated button functions (<i>theese can vary depending on panel design and MBSEQ_HW.V4 file</i>)		
1	Pattern 1,2,3,4	Select pattern/track group - G1, G2, G3, G4
2	Track 1,2,3,4	Select track within track group - T1, T2, T3, T4 (16 tracks are available in total)
3	Trigger layer A,B,C	Select trigger layer A or B or C. Holding C opens trigger layer selection menu and allows to select others Gate Acc Roll Glide Skip R.G(random gate) R.V(random value) No FX
4	Parameter layer A,B,C	Select parameter layer A and B. C switches between C & D or if Pressed&Hold opens parameter layer selection menu and allows to select others Note Vel Length Roll theese are default options, but CC, Pitch, Prob, Delay can be added via trigger selection menu (?) 
5	Step View	View and select steps if more than 16 are used 1..16 17..32 ...etc
4	a	b

From:

<http://wiki.midibox.org/> - **MIDIbox**

Permanent link:

http://wiki.midibox.org/doku.php?id=midibox_seq_quick_reference&rev=1273335382 

Last update: **2010/05/08 17:16**