

Display and Menu

The LCD is a standard 2x20 HD44780 display.
All parameters are shown in one view.

```
C 1 B4 MC4 BC3 BPM *  
BPM140 Ck 1: 1: 0
```

Menu navigation

The current menu position is indicated by characters 16,17 & 18 on the top line of the display.

BPM Default starting menu, allows the BPM to be changed

Bar Change the number of beats to a bar

MC Metronome measure note

MC4 C4 default **MCF** Metronome output disabled when MCF is displayed

BC Metronome beat note

BC3 C3 default

Ch Midi channel selection for the metronome output

C1k Midi clock on/off