

BootLoader-Switch

when activated it will force Core32 to bootup in Bootload mode, doesnt matter how buggy your program is...


you need:

2x wires


2x 2Pin-Header

On-OFF Switch

solder this like shown here:

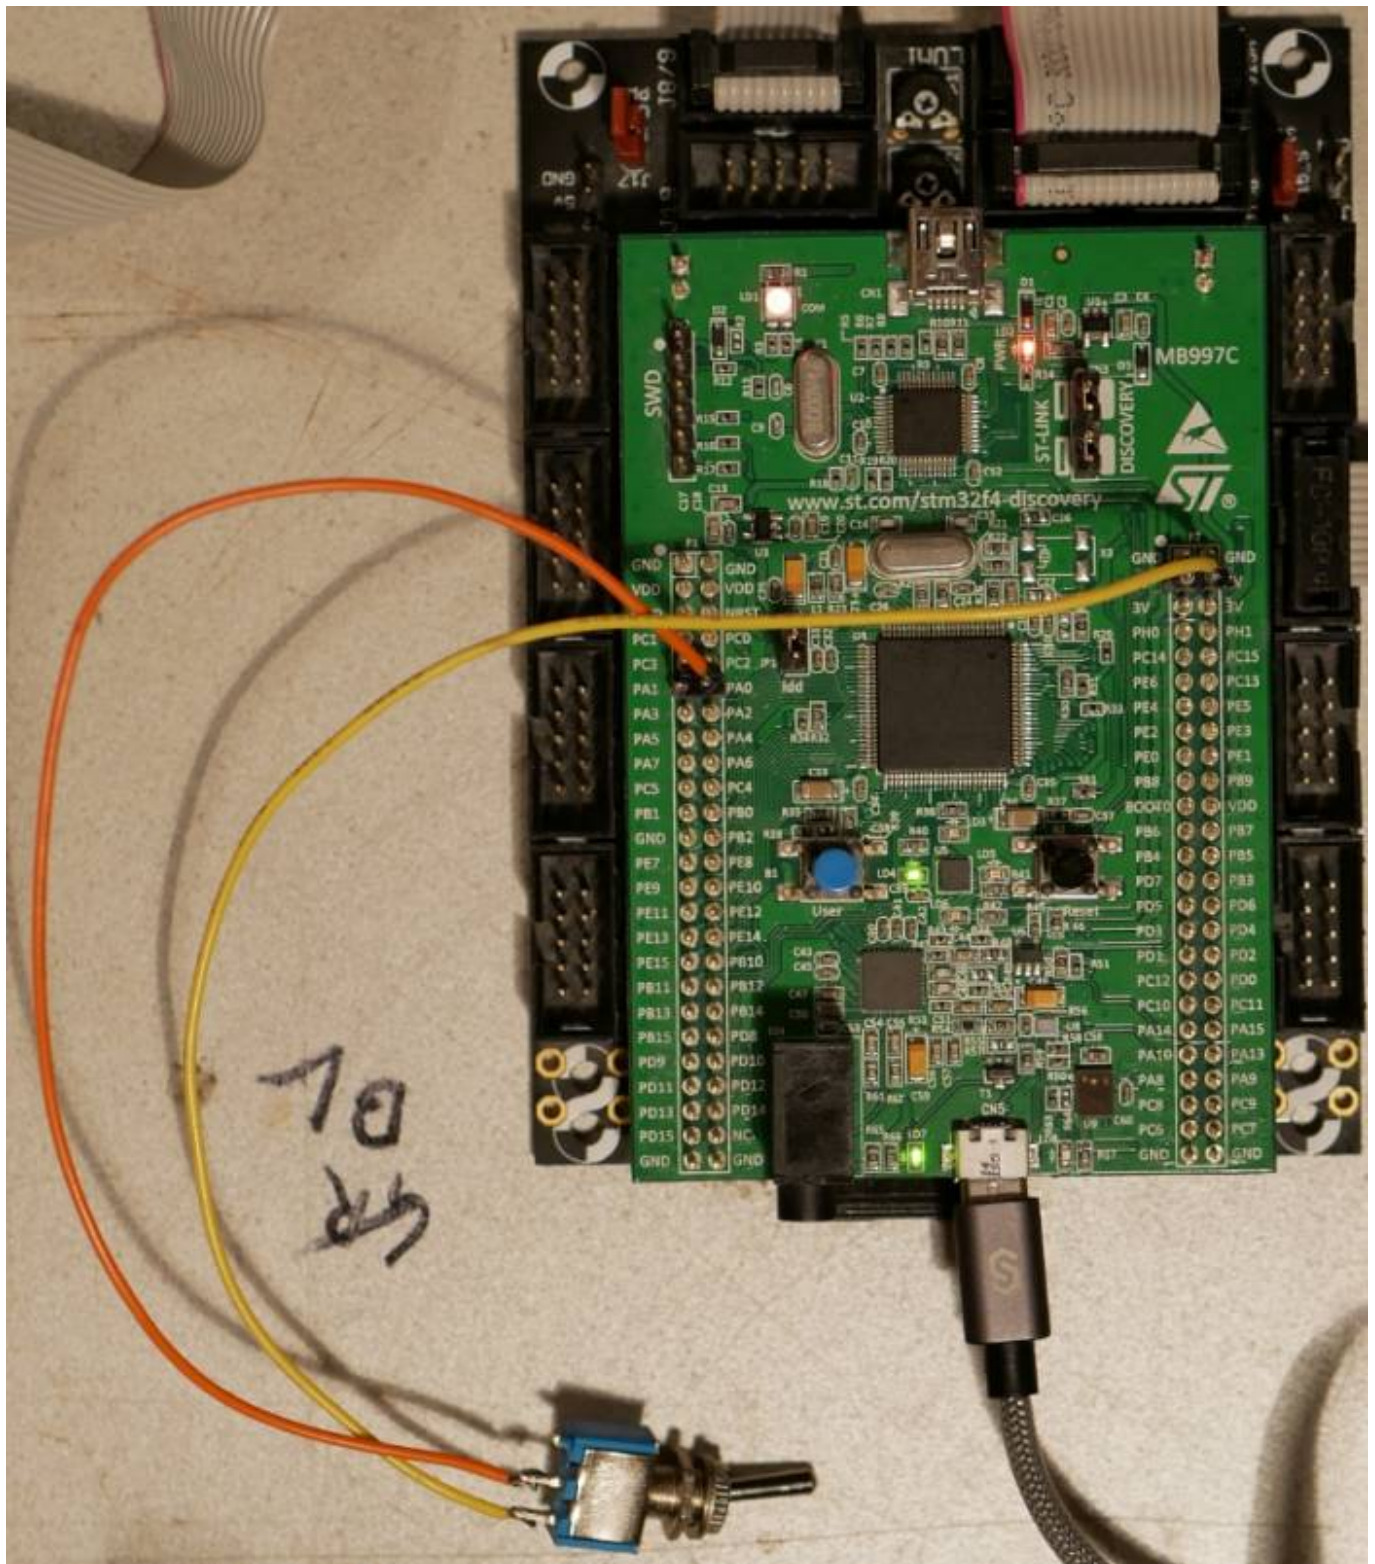

connect it to following pins:

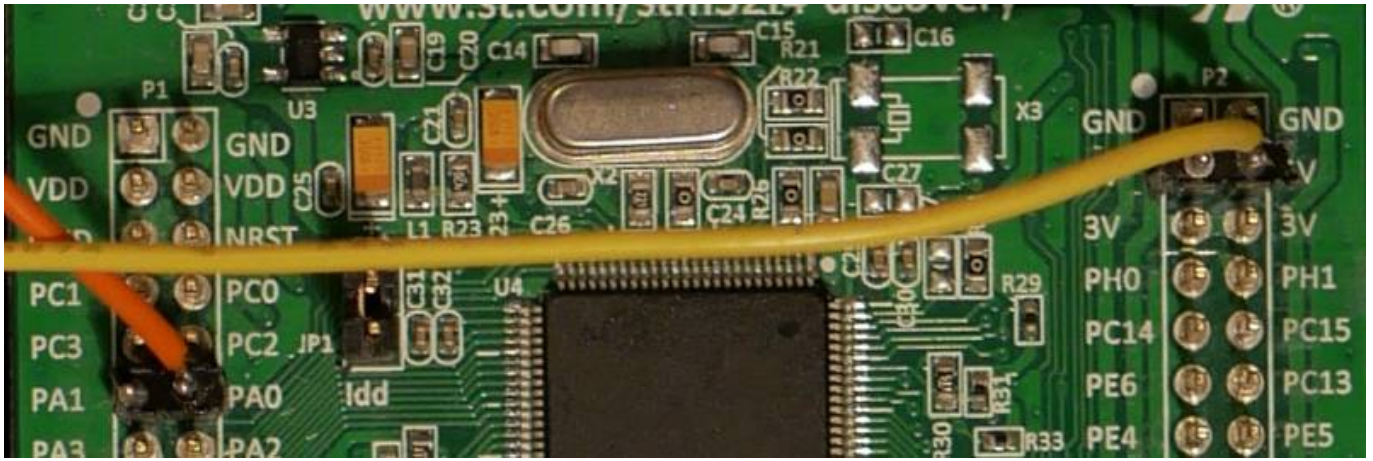

you maybe not need this, but when you need it, its good to have such switch on the backside of your midibox (@least when uploading, buggy betas, or you code your own program...)

greetings [Phatline](#)

From:
<https://wiki.midibox.org/> - **MIDIbox**

Permanent link:
<https://wiki.midibox.org/doku.php?id=home:mbhp:module:bootloader-switch&rev=1522616133>

Last update: **2018/04/01 20:55**

